

Your jeweller:

Printed in Switzerland



ENICAR



Operating instructions

**ENICAR**

Day and date



ENICAR

## The easiest way of setting the day and date on your ENICAR

- if the number on the back of your watch begins with the figures 257, 297, 177, or 197 (the complete reference number consists of 7 figures grouped as follows 000-00-00, but you only have to look at the three first):

First set the day of the week, then the date.

**Day of the week:** Keep turning the hands clockwise from midnight through 24 hours until the right day of the week appears in the calendar window.

**Date:** Turn the hands from midnight back to 9 p. m. and then forward again to a quarter past midnight, thus changing the date one day. Repeat until the right date appears.

- if the number on the back of your watch begins with 147 or 167

First set the date, then the day of the week.

**Date:** Turn the hands from midnight back to 8 p. m. and then forward again to half past midnight, thus changing the date one day. Repeat until the right date appears.

**Day of the week:** Turn the hands back from midnight again, but this time only until the calendar mechanism clicks gently (don't turn any further, otherwise you will change the date you have already set). Now set the hands to half past midnight again, thus changing the day of the week. Repeat, until the right day appears in the window.

When finally setting the right time, you must turn the hands on through 12 hours, if it is afternoon.